




# Lenovo IdeaTab S2109A-F Speaker Replacement

This will guide you through the process of removing and replacing the Lenovo IdeaTab S2109A-F Speakers.

Written By: Caelen

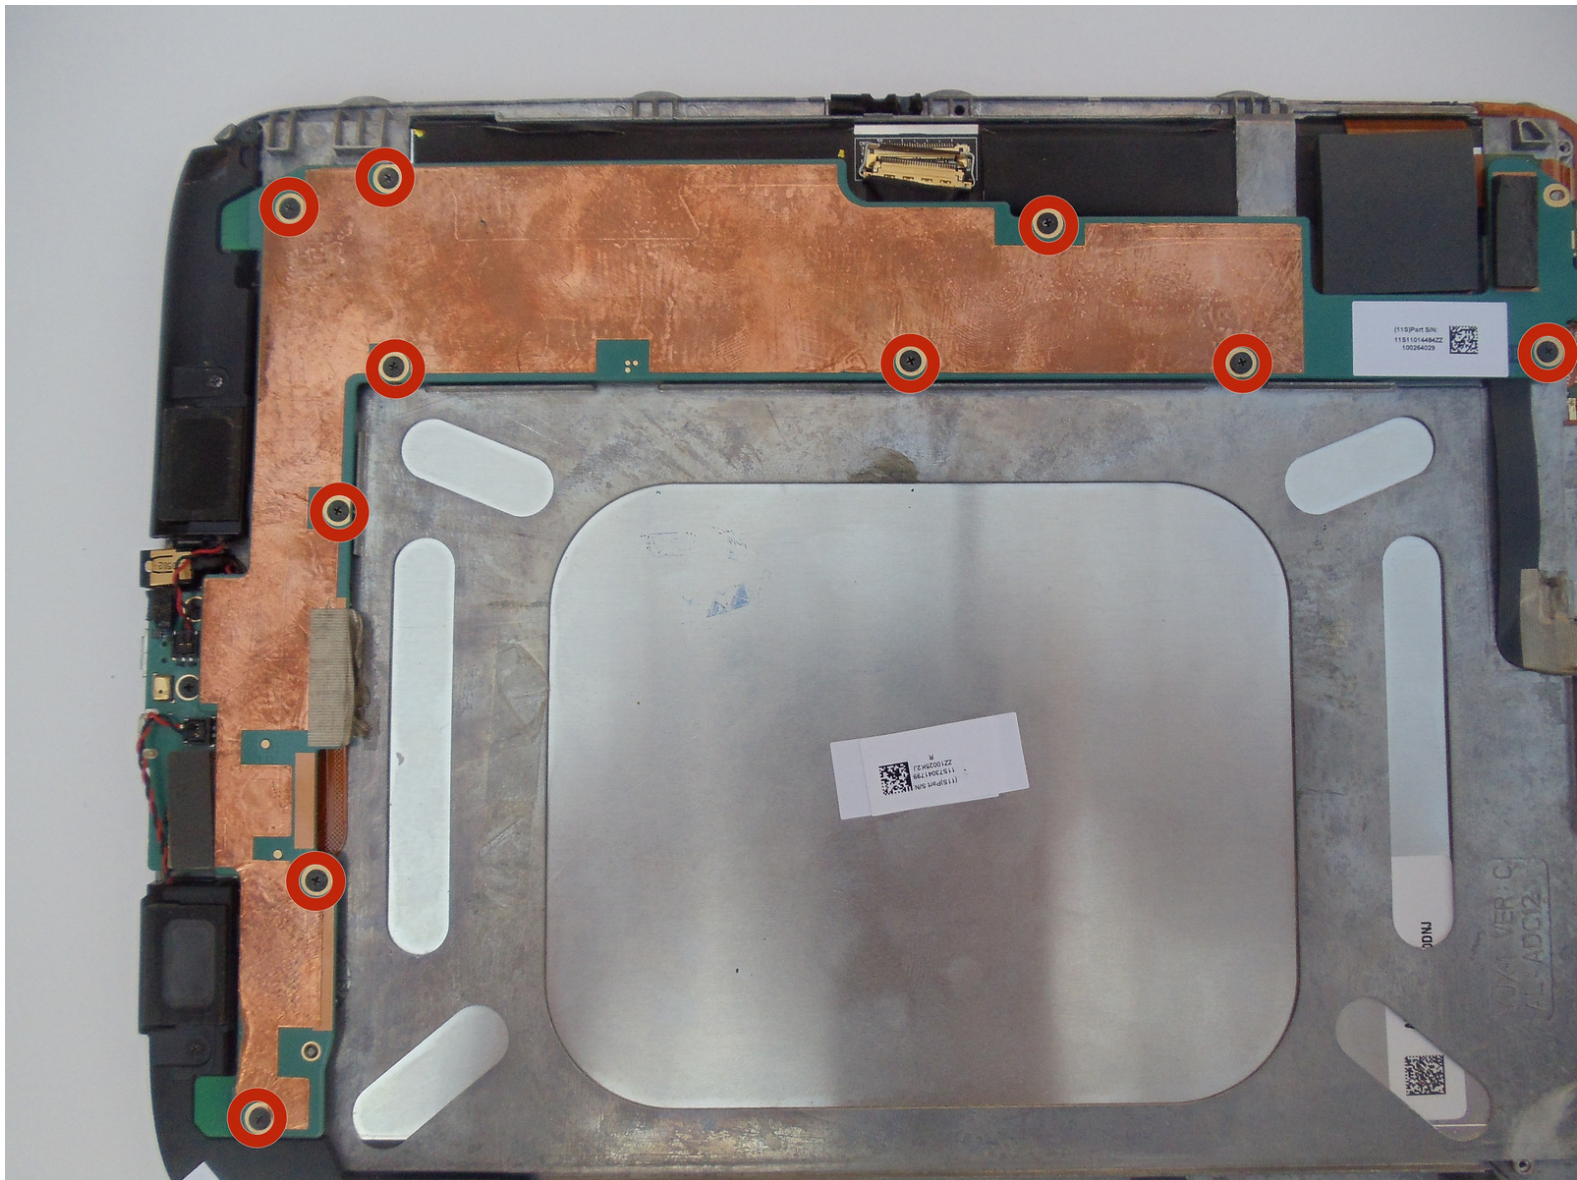

## INTRODUCTION

If your Lenovo IdeaTab is not holding a charge it may be time for your battery to be replaced. This repair guide is the first step for all repairs on your IdeaTab S2109A-F.

In this guide, you will be removing the following:

#Speakers

Prepare your required tools, a new battery for your tablet, and set aside about 10 to 15 minutes to complete the task.



### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
  - [iFixit Opening Tools](#) (1)
-

## Step 1 — Removing the Cover



- Using the large plastic opening tool loosen the back cover.
- Place slight pressure on the tablet and pry the back panel off .


## Step 2 — Finding the battery

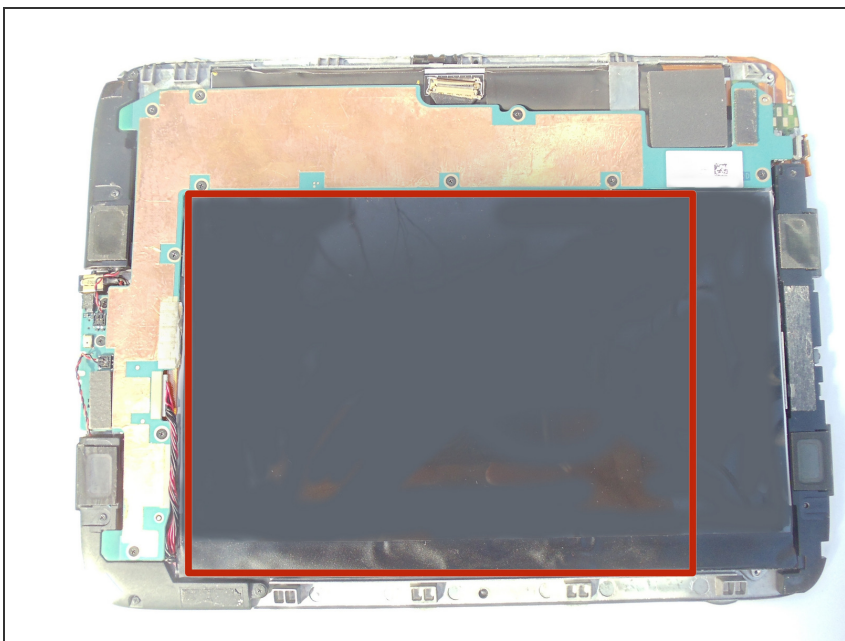

- Place device with screen face down all components should be visible.
- Look for a large black rectangle it is the battery.



### Step 3 — Lifting the battery

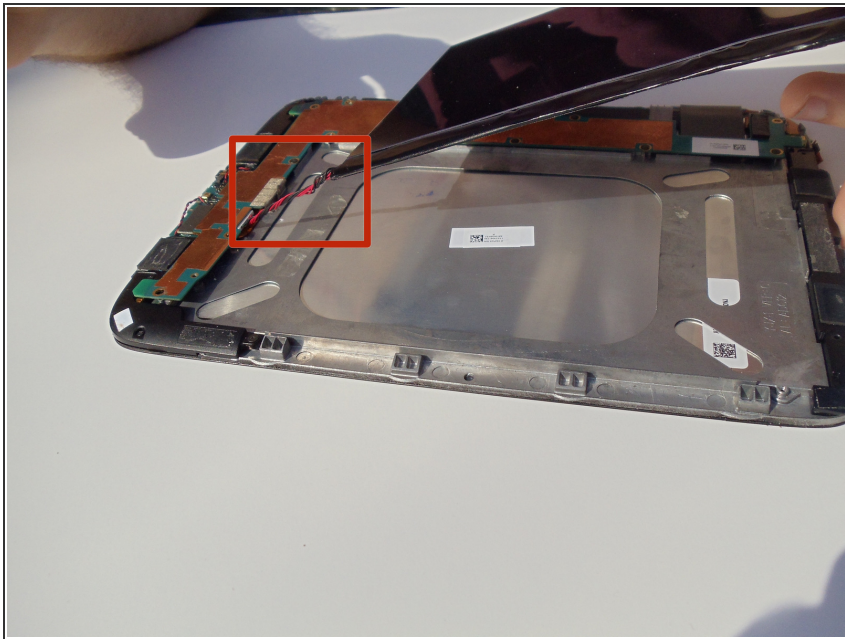



- Lift the battery upward.
- Ensure the red and black cord is pulled taut.

### Step 4 — Disconnecting the battery



- Hold the battery in one hand.
- Using your index finger and thumb of your other hand grab the red and black wires nearest to their connection point.
- Give a firm tug close to the device to disconnect the battery.

## Step 5 — Unscrew the System Board

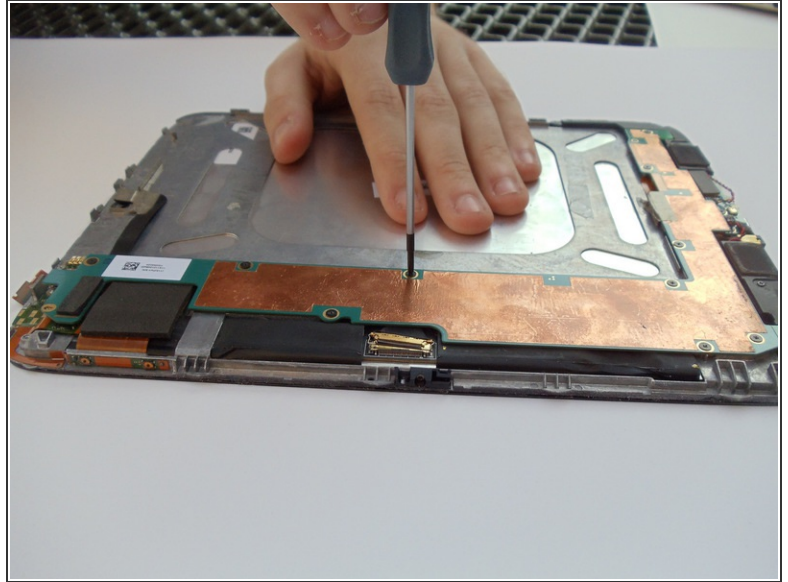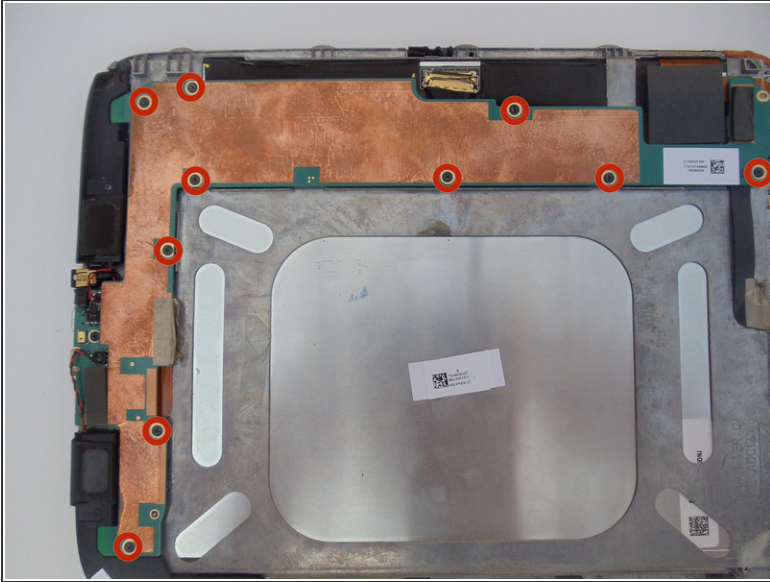

- Locate the long, L-shaped system board copper foil runs most of its length.
- Remove the 10 2mm PH00 black screws located on the edges of the system board with a PH00 screwdriver.



## Step 6 — Disconnecting the system board



- First Disconnect the gold connector by lifting the latch on it up with the plastic opening tool.
- pulling it loose using the latch.




## Step 7 — Moving the system board.

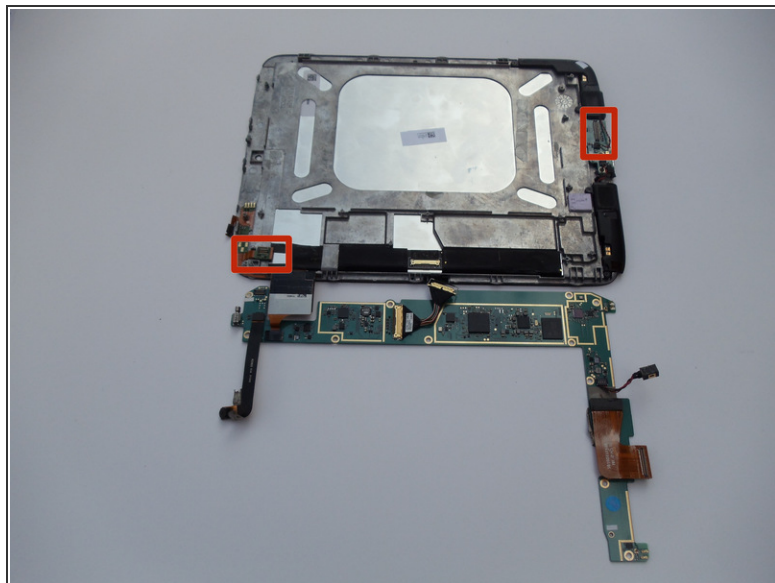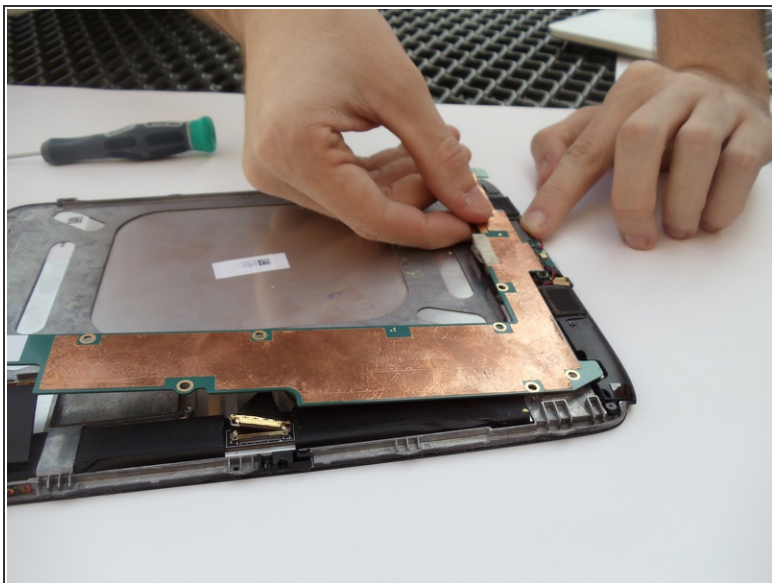




- Pull up on the L shaped board.
- The one bottom and one top connection points should disconnect.

## Step 8 — Unscrewing the speakers

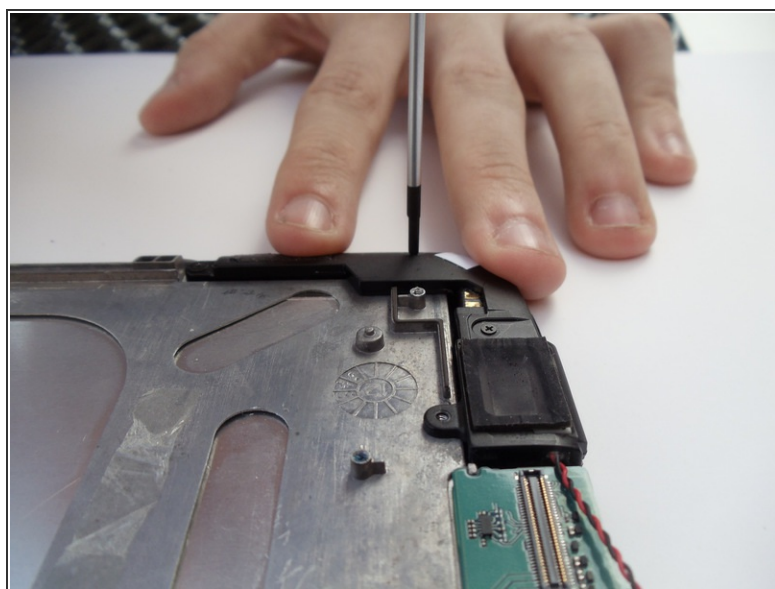


- Unscrew the 7 2mm PH00 black screws connecting the speakers using the PH00 screwdriver.

## Step 9 — Moving the speakers

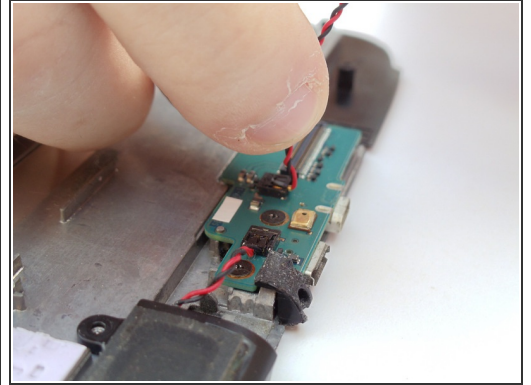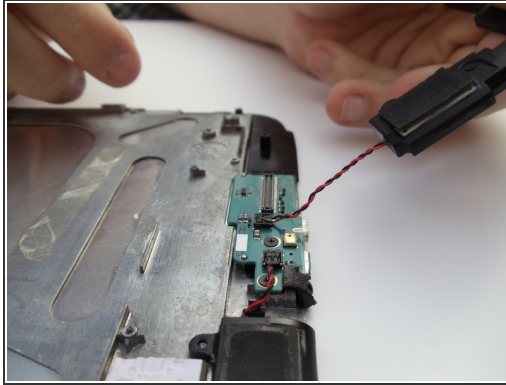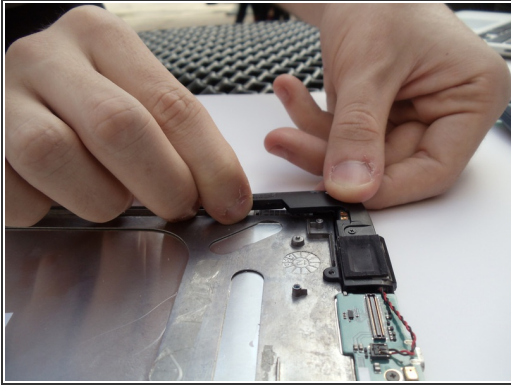

- Lift the disconnected speakers from their resting position.
- Grab the red and black cable with your index finger and thumb.

## Step 10 — Disconnecting the speakers

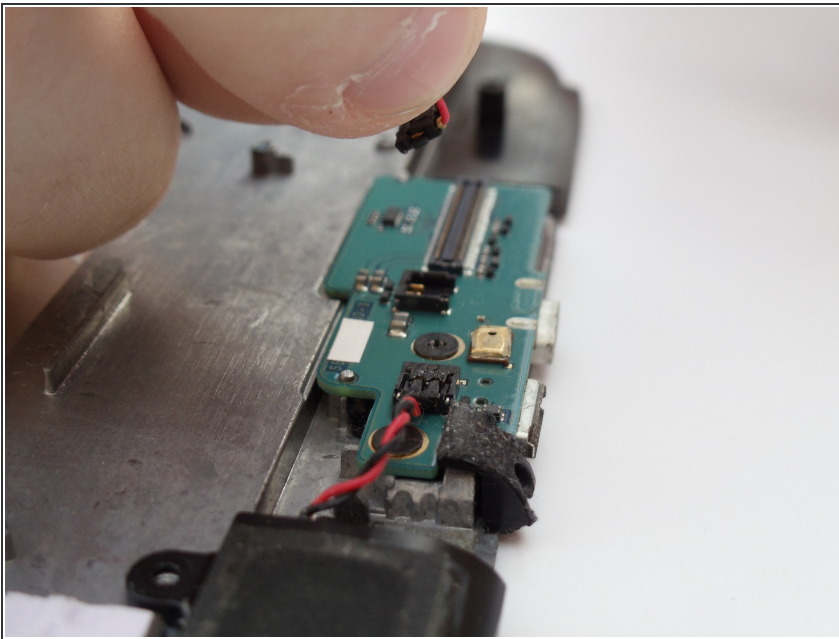

- Pull up on the connection to disconnect the speakers.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-20 04:42:36 PM.